

## SN-1016G

16 Port 1000Mbps Ethernet Switch



### Overview

SN-1016G, with 10/100/1000M auto-negotiation RJ45 port, is designed independently by Shenzhen Fengrun Technology Co., Ltd for Cafe, enterprise, school and intelligent community.

### Key features

Support 16 10/100/1000M auto-negotiation RJ45 port

Support IEEE 802.3x Flow Control for full-duplex and back pressure for half-duplex

## Technical Specification

Standards and Protocols		IEEE 802.3,IEEE 802.3U IEEE 802.3ab,IEEE 802.3x
Ports		16 10/100/1000M RJ45 port
Indicators	Each port	Link/Ack
	Each device	Power
Features	Stored and forward	Support
	Bandwidth	36Gbps
	MAC address	8K
Operating Environment		Operating Temperature: 0℃~40℃ (32°F ~104°F) Storage Temperature: -40℃~70℃(-40°F~158°F) Operating Humidity: 10%~90% RH( non-condensing) Storage Humidity: 5%~90% RH (non-condensing)
Input Power		100-240V,50/60Hz
Demersions (L×W×H)		440mm×180mm×44mm

### User Guide:

#### 1.Check the Network switch

- (1)Please check the enclosure,RJ45 ports,LED indicators ,sure they are ok.  
(2)Connect the Network switch with power,make sure the initialization of Network switch is available as below:  
POW indicator is off at the beginning when power connected  
POW indicator is on and keeps  
Other indicators will be on ,then off after one or two seconds

#### 2.Connection cables:

- 1 Connected the Switch to Computer or other PD( like IP camera, wireless AP) by CAT5 or 6 cables
- 2 Connected the external power adapter to Switch and the power cord to AC plug
- 3 Turn on the switch

### Caution:

- 1) All operation should be provided only by a qualified service technician.
- 2) Please avoid any heavy thing placed on the Device.
- 3) Do not use this product near water, for example, in a wet basement or near a swimming pool.
- 4) For outdoor use, the device itself should be housed inside a protective enclosure.
- 5)Cutting power during a firmware upgrade can damage your device.
- 6)Only use attachments/accessories specified by the manufacturer.
- 7)Opening the switch or tampering with the warranty sticker can void your warranty.